GASTROBACK®

Instructions for use

Design Classic Digital Mixer

Art.-Nr. 40985

Read all provided instructions before first usage!
Model and attachments are subject to change

Carefully read all provided instructions before you start running the appliance and pay regard to the warnings mentioned in these instructions.

Important Instructions

- ***WARNING:*** *To avoid injury to persons and damage, always turn the appliance OFF, wait for the motor to stop completely and unplug the appliance, immediately after operation and before assembling/disassembling or cleaning the appliance. Never use force operating, assembling or disassembling the appliance.*
- ***WARNING:*** *The blade is very sharp. Handle with care when cleaning.*
- ***NOTE:*** *Ensure the appliance is properly assembled before connecting the plug into the power outlet. Never turn the appliance on without the lid or refill lid. Never turn the appliance on without the container properly placed on the motorblock. Never place only the holder or the blade only on the motorblock. Never touch the drive gear when the plug is connected to the power outlet.*
- ***WARNING:*** *If the blade is mounted in the glass container, the container is positioned on the motorblock, and the plug is connected to the power outlet, do not insert your fingers, a wooden or plastic spoon or similar cooking utensils or foreign substances in the glass container. Always take the glass container off the motorblock before pushing the food down with a spoon.*
- *Without the jar, the unit does not work.*
- *As a safety feature, the unit automatically shuts off after operating for 2 minutes. If you want to operate again, unplug the appliance, wait 1 minute and plug in again.*
- ***WARNING:*** *Do not overfill the glass container. If necessary, take some food out of the container, using a wooden or plastic spoon, before starting the appliance again.*
- ***Do not*** *chop extremely hard food, such as nuts with shell or bones to avoid overrunning, spurt out or that the motor stalls or stucks during operation because the blade is blocked.*
- ***WARNING:*** *Do not operate the appliance when the glass container has a crack or any part of it is likely to be damaged. The appliance is likely to be damaged if the appliance was subject to inadmissible strain (i.e. overheating, mechanical, or electric shock) or if there are any cracks, excessively frayed parts, distortions or the motor stalls or stucks. In this case, immediately unplug the appliance and return the entire appliance (including all parts and accessories) to an authorised service centre for examination and repair.*
- ***WARNING: Do not fill ingredients into the glass container which exceed a temperature of 60 degrees. After processing ice cubes slowly heat up the glass container before processing hot ingredients. Otherwise the glass container will crack or get damaged. Use gloves processing hot liquids and do not fill the container up too high. Ensure not to burn yourself on the glass container, overrunning, spurt out or hot steam.***
- ***WARNING:*** *Do not place blender in the freezer with food or liquids. This will freeze and damage the blade assembly, jar and motor.*
- ***WARNING:*** *Ensure the glass container is locked securely onto the motorblock and that you can not knock the appliance over during operation to avoid personal injury.*
- ***CAUTION: DO NOT*** *place the appliance in an automatic dishwasher.*
- ***The appliance is for household only.***

Important Safeguards

Carefully read all instructions before operating and save the instructions for further reference. Do not attempt to use this appliance for any other than the intended use, described in these instructions. Any other use, especially misuse, can cause severe injury or damage by electric shock, fire or moving mechanical parts. These instruction is an essential part of the appliance. When passing on the appliance to a third person, ensure to include these instructions.

Never leave the appliance unattended when in operational mode. *Any operation, repair and technical maintenance of the appliance or any part of it other than described in these instructions may only be performed at an authorised service centre. Please contact your vendor.*

Safeguards for Daily Operation

• The appliance is designed for normal household quantities. ***Do not*** *operate or store the appliance outdoors or in damp or wet areas.*

• ***Do not*** *attempt to operate the appliance using any parts or accessories not recommended by the manufacturer (i.e. blade, sealing ring).* ***Do not*** *operate the appliance, when the appliance or any part of it is likely to be damaged, to avoid risk of fire, electric shock or any other damage or injury to persons.* ***Do not*** *attempt to open the motor housing or to repair the power cord. Check the entire appliance regularly for proper operation. The appliance is likely to be damaged if the appliance was subject to inadmissible strain (i.e. overheating, mechanical, or electric shock) or if there are any cracks, excessively frayed parts, distortions or the motor stalls or stucks. In this case, immediately unplug the appliance and return the entire appliance (including all parts and accessories) to an authorised service centre for examination and repair.*

• ***Do not*** *lift, pull or carry the appliance by the power cord. To move or operate the appliance, always grasp the motorblock.*

• Close supervision is necessary when the appliance is used near young children. ***Do not*** *let young children play with any parts of the appliance or the packaging. The blade is extremely sharp. The appliance is* ***NOT*** *intended for use by children or infirm persons without supervision. Take care that no one will pull the appliance by the power cord, especially when young children are near.*

• Always place the appliance on a clean, dry and stable surface where it is protected from inadmissible strain (i.e. mechanical or electric shock, overheating, frost, moisture) and where young children cannot reach it.

• Operate the appliance on a well accessible, stable, level, dry, and suitable large surface. ***Do not*** *place the appliance or any part of it on or near hot surfaces (heater, gas burner, grill, or oven).* ***Do not*** *place the appliance near the edge of the table or counter or*

on inclined or wet surfaces or where it can fall. Keep the entire appliance away from direct sunlight and sharp edges. Ensure the glass container is locked securely onto the motorblock and that you can not knock the appliance over during operation to avoid personal injury.

- *Never leave the appliance unattended when the plug is connected to the power outlet. Always* ***IMMEDIATELY*** *turn the appliance ´OFF`, wait for the motor to stop completely, and then unplug the appliance, if the appliance is not in use (even for a short break) and before assembling, disassembling or cleaning.*

- ***Do not*** *leave any food dry on the surfaces of the appliance.* ***Do not*** *immerse the motor housing or power cord in water or any other liquid.* ***Do not*** *pour or drip any liquids on the motor housing or power cord. When liquids are spilled on the motor housing, immediately unplug the appliance and dry the motor housing to avoid risk of electric shock or fire.* ***Do not*** *attempt to operate the appliance, when liquids are on or in the motor housing.*

- ***Do not*** *place the motorblock in an automatic dishwasher!*

- *To avoid damage,* ***do not*** *use any abrasive cleaners, corrosive chemicals (i.e. disinfectants, bleach) or cleaning pads for operation or cleaning.* ***Do not*** *use any hard or sharp utensils for operation or cleaning. Always handle the entire appliance and all parts of it with care and without violence.*

- ***WARNING:*** *The blade is very sharp. Pay attention when handling the blade. Only touch the blade on the retaining ring and handle with care when cleaning.*

- ***Do not*** *use the appliance if it is damaged or units of the appliance are damaged.* ***Do not*** *use the appliance if it does not function properly or if it was excessively loaded. The appliance is likely damaged if the appliance or units of the appliance show cracks, exorbitant wearing down, alterations or leaks. It is also likely damaged if the drive wheel of the motorblock moves slowly. Take the appliance for technical maintenance and repair to an authorised specialised reparation shop.*

- ***WARNING:*** *Do not overfill the glass container. If necessary, take some food out of the container, using a wooden or plastic spoon, before starting the appliance again.*

- ***Do not*** *chop extremely hard food, such as nuts with shell, bones to avoid overrunning, spurt out or that the motor stalls or stucks during operation because the blade is blocked.*

- ***WARNING: Do not fill ingredients into the glass container which exceed a temperature of 60 degrees. After processing ice cubes slowly heat up the glass container before processing hot ingredients. Otherwise the glass container will crack or get damaged. Use gloves processing hot liquids and do not fill the container up too high. Ensure not to burn yourself on the glass container, on overrunning, spurt out or hot steam. Touch the handle only for lifting the glass container.***

Movable and sharp-edged units – risk of injury

- *Always turn the appliance ´OFF`, wait for the motor to stop moving and then pull the plug before taking the glass container off the motorblock or taking off the lid. It could take about 3 seconds until the motor has completely stopped. Never leave the appliance ´ON` when not in use.*

- ***Never** put your hands, wooden spoons or other foreign substance (such as hair, cloth, brush, towels) into the glass container when the motor is running or the appliance is connected to the power outlet. Always take the glass container off the motorblock first before you push down the food with a spoon or add new ingredients.*

- ***WARNING:** The blade is very sharp. Handle with care when cleaning. Only store the appliance completely assembled. This way the blade will be out of reach.*

- ***NOTE:** Ensure the appliance is properly assembled before putting the plug into the power outlet. Never turn the appliance on without the lid or the refill lid. Never touch the drive gear when the plug is connected to the power outlet.*

- *Always keep one hand on the lid while processing. Using solid ingredients (such as hard fruits or vegetable), overloading the glass container or processing with a slow speed, the motor could stuck, stall or run very slow. In this case turn the appliance ´OFF` to avoid overheating (see ´Trouble shooting`).*

- ***WARNING:** If the blade is mounted in the glass container, the container is positioned on the motorblock, and the plug is connected to the power outlet, do not insert your fingers, a wooden or plastic spoon or similar cooking utensils or foreign substances in the glass container. Always take the glass container off the motorblock before pushing the food down with a spoon.*

- *The appliance is designed for normal household quantities. **Do not** operate the appliance in continuous operation for more than 2 minutes to avoid overheating. If processing large quantities of food, regularly interrupt operation and unplug the appliance for at least 1 minute, to let the motor cool down and avoid overheating. The appliance has a safety feature which turns the unit automatically off after operating for 2 minutes. Unplug the appliance and wait 1 minute before switching the appliance on again.*

- ***Do not** chop extremely hard food, such as nuts with shell or bones because the blade could stall or block. Do not overfill the glass container to avoid overrunning, spurt out or that the motor stalls or stucks during operation.*

Important Safeguards for all Electrical Appliances

• *Always operate the appliance near a suitable wall power outlet and connect the appliance directly to the power outlet. Do not use any extension cords or a multiple desk outlet.*

• *Ensure that the voltage rating of your mains power supply corresponds to the voltage requirements of the appliance (220/230 V, 50 Hz, AC). Always connect the appliance directly to a mains power supply wall socket with protective conductor (earth/ground) connected properly. The installation of a residual current safety switch with a maximum rated residual operating current of 30 mA in the supplying electrical circuit is strongly recommended. If in doubt, contact your local electrician for further information.*

• ***Do not*** *leave the appliance unattended while connected to the power supply. Always turn the appliance ´OFF` and* ***IMMEDIATELY*** *unplug the appliance after operation and if it is not in use (even for a short break) and before cleaning and/or assembling or disassembling. Always grasp the plug to disconnect the appliance from the power outlet.*

• *Always handle the power cord with care.* ***Do not*** *pull or strain the power cord. The power cord may never be knotted or squeezed.* ***Do not*** *let the power cord hang over the edge of the table or counter. Take care not to entangle in the power cord.* ***Do not*** *touch the appliance with wet hands to avoid risk of electric shock.* ***Do not*** *touch the appliance, if it is damp or wet or is touching wet surfaces while connected to the mains power supply. In this case, immediately unplug the appliance and dry the appliance (see 'Care and Cleaning').*

• *Ensure that the holder is leak-proof before putting the glass container on the motorblock. Always wipe off spilled liquids immediately. Do not immerse the motor or power cord in any liquids or spill any liquids on it or place the motor on wet surfaces. Never let any liquids run into the motorblock or underneath it to avoid electric shock. There are louvre underneath the motorblock. Ensure that no water can run into the louvre. When liquids are spilled on the motor housing, immediately unplug the appliance and dry the motor housing to avoid risk of electric shock or fire.* ***Do not*** *attempt to operate the appliance, when liquids are on or in the motor housing.*

Get to know your Mixer

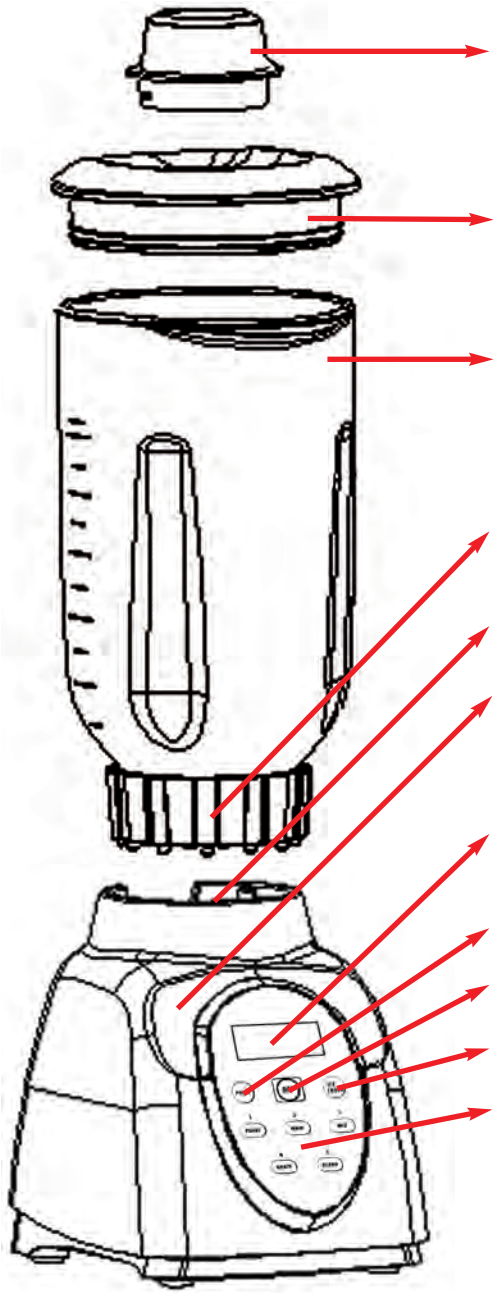

Refill lid

Lid with refill aperture

Temperature-resistant glass container

Holder for the container

Drive coupling

Motorblock with LCD-Screen,
Speedcontrols, Pulse button,
Ice crush button and Off button

LCD-Screen

Pulse button: for interval operation

Off button

Ice crush button

1-5: Speedcontrols for mixing
- permanent operation

1: Puree
2: Whip
3: Mix
4: Grate
5: Blend

Assembling and disassembling the appliance

Disassembling the glass container

1. *Always turn the appliance ´OFF`, wait until the motor stops and unplug the appliance before assembling/disassembling. Always completely assemble your appliance before you put the plug into the power outlet.*

2. *Take the lid off the glass container and empty the container.*

3. *Clean the units with a soft sponge in warm soapy water and dry them off afterwards.*

WARNING: *The blade is very sharp. Pay attention not cutting yourself cleaning the blade.*

Do not use abrasive cleaners, cleaning pads, corrosive chemicals (disinfectants, bleach) or any sharp or hard objects (i.e. metal scouring pads) for cleaning, for this could damage the surfaces. Always handle the entire appliance with care and without violence.

Assembling the glass container

Ensure that the glass container is clean before you connect the holder and the blade.

1. *The blade has a sealing ring. Ensure the sealing ring seals the glass container properly. Before filling liquid into the container check if the container is leak-proof by filling it with water. If the container is leaking the sealing ring might be damaged and spilled liquids might run right into the motor. Contact your vendor for replacement units.*

ATTENTION: *Always wipe off spilled liquids immediately. Never let any liquids run into the motorblock or underneath it to avoid electric shock. When liquids are spilled on the motor housing, immediately unplug the appliance and dry the motor housing to avoid risk of electric shock or fire.* ***Do not*** *attempt to operate the appliance, when liquids are on or in the motor housing. Take the appliance for technical maintenance and repair to an authorised specialised reparation shop.*

2. *Place the proper assembled container onto the motorblock. Turn the container until it locks onto the motorblock. The screen will turn on as soon as the plug is plugged into the power outlet and the container is securely locked onto the motorblock. Load the container with ingredients, place the lid and the refill lid on the glass container, pick a speed on the control panel and start processing.*

ATTENTION: *Always ensure the motorblock is turned off when placing the container on the motorblock to avoid personal injury.*

ATTENTION: *Never try to sharpen the blade. Replace the blade if it is blunt. Please contact our service department for the replacement part.*

Operating

Before first use

WARNING: *The blade is very sharp. Pay attention when cleaning the blade. Do not leave young children play with the appliance or any part of it or the packing material.*

After unpacking, remove all promotional and packing materials as well as any foreign objects.

Before first use and after a long period of storage, clean the appliance with a damp soft cloth and warm soapy water (see 'Care and Cleaning').

General Tips

Place the container on a suitable, stable, dry, and clean working surface. (see: 'Safeguards for Daily Operation'). Always wipe off spilled liquids immediately. Never let any liquids run into the motorblock or underneath it to avoid electric shock. When liquids are spilled on the motor housing, immediately unplug the appliance and dry the motor housing to avoid risk of electric shock or fire. ***Do not*** *attempt to operate the appliance, when liquids are on or in the motor housing.*

WARNING: *If the container is positioned on the motorblock and the plug is connected to the power outlet, do not insert your fingers, a wooden or plastic spoon or similar cooking utensils or foreign substances in the glass container. Always turn the appliance ´OFF` and wait for the motor to stop before taking the container off the motorblock, removing the lid, checking the food, pushing the food down with a spoon or filling in more ingredients. Use cutlery made of wood, rubber or plastic only. Never use force when trying to push the food down or trying to remove food that blocks the blade.*

The Design Classic Digital Mixer can not replace all of your kitchen appliances. The mixer can not be used for: mashing potatoes, beating the white of eggs, mincing meet, or juicing fruits. Also it is not possible to use it for stirring very firm batter or dough or for chopping very hard ingredients such as nuts with shell, bones or alike.

IMPORTANT: *Do not leave any food dry on the surfaces of the appliance. Always clean the appliance right after use (see ´Care and Cleaning`).*

Tips for operation

Fill liquid ingredients into the container first unless it is described different in the recipe. Prepare your food before you fill it into the container. Do not overfill the container.

- *Cut vegetables, fruit, cheese, cooked meat or fish in pieces of about 2 cm.*
- *Remove uneatable and hard parts of the food: stalks, skins and shells, seeds, bones, gristle, and tendons.*

IMPORTANT: *Do not overload the motor with food that is oversized or too hard. Turn the appliance ´OFF` as soon as the motor stalls or stucks to avoid overheating of the motor (see ´Trouble shooting`). Process ingredients a few seconds only. Permanently check on the consistency of the food in between the operation to avoid getting food which is too fine and slushy.*
Pick the speed for your needs: mixing (MIX 1-5) for permanent operation, ice-crush switch or interval-switch (Pulse).

Speedcontrol

It is possible to process food with all kind of texture using the speedcontrol. The control panel has therefore different marks. You find some ideas and proposals on how to use the different speed.

Pulse	*Interval operation: ideal for processing nuts (i. e. almonds), boiled meat or fish.*
Ice-Crush	*For crushing ice.*
1 PUREE	*For onions, thick sauces, etc. It does not get a sauce foamy. For mashing fruit and vegetable.*
2 - WHIP	*For cooking recipes and salad dressings. Whipping cream.*
3 MIX	*To combine milkpowder, juice and gelatin or preparing eggs for omelettes.*
4 GRATE	*Used for grinding hard and solid seeds such as beans, cafe, chickpeas, or grinding sugar to make icing sugar.*
5 BLEND	*Highest speed. Ideal for preparing Frappe-ice; throw in the ice cubes one after the other. Good for mashing harder fruit and vegetable.*

The length of mixing time depends on your personal preferences, the consistency of the ingredients and the recipe.

Interval-function: The Pulse-switch and the Ice-Crush switch are touch sensitive switches which keep the motor running only for the time you press the switch down. As soon as you release the switch the motor stops.

Mixing: The MIX-switches are for permanent operation. The motor only stops when pressing the ´OFF`-switch or after 2 minutes of permanent operation.

Note: *As a safety feature, the unit automatically shuts off after operating for 2 minutes. If you want to operate again, unplug the appliance, wait 1 minute and plug in again.*

Suggestions:

Majonaise:	*2 minutes*
Peanutbutter:	*2,5 to 3 minutes*
Dressing:	*12 seconds*
Cream:	*1 minute*
Kibble cereal:	*30 seconds and more*
Sauce:	*45 seconds*
Milkpowder:	*10 to 15 seconds*
Backing mixture:	*2 minutes*
Fruit:	*5 to 30 seconds*
Cocktails:	*5 to 8 seconds*

Directions for use

- *The mixer proceeds fast and reliable when you add the ingredients one after the other in small portions.*
- *The mixer processes within seconds. Avoid processing food longer then necessary.*
- *Always ensure the lid is closed before starting the motor to avoid spilling.*
- *You can add ingredients during the operation through the refill aperture. Never place your face or hands over the opening.*
- *If the motor slows down use the next faster speed.*
- *Always clean the appliance right after use.*

If ingredients get stucked on the walls of the container turn the appliance off, take the container off the motorblock, open the lid and push the food down carefully using a spatula. Take care of the blade.

Production steps

WARNING: *Ensure the container is locked securely onto the motorblock and that you can not knock the appliance over during operation to avoid personal injury.*

As soon as the plug is connected to the power outlet the LCD-screen comes on. Pulse and speed functions display on the screen.

1. *Fill the ingredients into the container.*

IMPORTANT: *Cooked food should cool down before processing. Food with hard texture should be cut in pieces of 2 cm size before filling them into the container. Fill liquids in first. Do not overload the container to avoid spilling or overloading the motor.*

2. *Place the lid on the container and press the lid down to seal the top of the container. Close the opening of the lid with the refill lid. The refill lid has two small*

guiding pins that fit in the matching gaps of the lid. Push the lid down and turn it clockwise until it is securely locked.

WARNING: *Never take the container off the motorblock, the lid of the container or place a spoon or other foreign substance into the container while the motor is running. Always turn the appliance ´Off` first and wait for the motor to stop moving. Now you can take the container off the motorblock remove the lid and check on the ingredients.*

WARNING: *Do not fill ingredients into the container which exceed a temperature of 60 degrees. After processing ice cubes slowly heat up the container before processing hot ingredients. Otherwise the container will crack or gets damaged. Use gloves processing hot liquids. Ensure not to burn yourself on the container, overrunning, spurt out or hot steam.*

ATTENTION: *If you are working with hot ingredients first take off the refill lid and cover the opening with a towel to release the over pressure and steam.*

IMPORTANT: *Ensure the container is properly locked on the motorblock and stands securely. The unit does not work if the container is not in proper position on the motorblock.*

3. *Place one hand on top of the lid. Turn the appliance on choosing a speed for your needs (see ´Speedcontrol`). The motor starts moving. The selected speed function blinks on the display. The Ice-Crush function is the only function is not shown on the display.*

ATTENTION: If the motor slows down or stucks turn the appliance off immediately to avoid overheating *(see ´Trouble shooting`).*

4. *Turn the appliance ´Off` when the operation is finished.*

5. *As soon as the motor stops moving you can take the container off the motorblock holding on to the handle. Take off the lid to check the consistency of the food or to push down the food from the sides of the container. You can fill in more ingredients through the refill aperture. Turn the refill lid anticlockwise and lift it. After adding the ingredients close the refill aperture, place the container on the motorblock and make sure it is securely locked. Turn on the appliance. Process until the food has the favoured texture.*

6. *Turn the appliance ´Off` as soon as you are done with operating and take the container off the motorblock. You can pour out liquid foods.*

IMPORTANT: *Do not leave any food dry on the surfaces of the appliance. Always clean the appliance right after use (see Care and Cleaning).*

Care and Cleaning

WARNING: *To avoid injury to persons and damage, always turn the appliance ´OFF`, wait for the motor to stop completely and unplug the appliance, immediately after operation and before assembling/disassembling or cleaning the appliance.*

WARNING: *Ware oven gloves if processing hot food. Ensure not to get burned on spilled over liquids or steam.*

ATTENTION: *Do not use abrasive cleaners, cleaning pads, corrosive chemicals (disinfectants, bleach) or any sharp or hard objects (i.e. metal scouring pads) for cleaning, for this could damage the surfaces. Always handle the entire appliance with care and without violence.*

Cleaning the container

1. *Empty the container and rise it with warm water.*

2. *Replace the container on the motorblock.*

3. *Fill the container with warm soapy water. The waterlevel should be high enough to cover the blade with water but not too high to avoid run over liquids. Close the lid and turn on the motor on "5". Let the motor run for a few seconds.*

4. *Turn the motor ´Off`, wait for the blade to stop moving and take the container off the motorblock.*

5. *Pull the plug out of the power outlet.*

6. *Take the lid off the container and pour out the water. Stubborn residues you can remove using a nylon washing brush or sponge.*

WARNING: *Pay attention not to cut yourself cleaning around the blade or cleaning the blade.*

IMPORTANT: *The container should be clean now. For the case that there are stubborn residues on the container or the blade, soak stubborn residues for a few minutes and then remove them using a nylon washing brush or sponge. Do not cut yourself.*

7. *Clean the lid and the refill lid with soapy water.*

8. *Rinse the container, the lid, and the refill lid with clear water and dry the units thoroughly and carefully with a cloth or leave all parts dry naturally where they are out of reach of young children. When the units are dry assemble the container for storage or usage.*

Cleaning the motorblock

WARNING: Do not *place the appliance in an automatic dishwasher or pour boiling water over it. Do not immerse the motor or power cord in any liquids or spill any liquids on it or place the motor on wet surfaces. Always wipe off spilled liquids immediately. Ensure that no water can run into the louvre. When liquids are spilled on the motor housing, immediately unplug the appliance and dry the motor housing to avoid risk of electric shock or fire.* ***Do not*** *attempt to operate the appliance, when liquids are on or in the motor housing.*

1. *Always turn the appliance ´OFF`, wait for the motor to stop completely, and unplug the appliance from the power outlet before you start cleaning the motorblock.*

2. *Wipe the motor housing and power cord with a damp soft cloth. Take care not to spill or drip water or any other liquids on the motor housing.*

ATTENTION: *Ensure not to damage the drive gear. Never poke with anything into the motorblock. If necessary use a soft brush for cleaning. If any liquids run into the motorblock clean and dry the motorblock very carefully.*

3. *Thoroughly dry the motor housing after each cleaning or leave it dry naturally where it is out of reach of young children. Afterwards assemble the appliance.*

Attendance: *You do not need to oil the motor. Clean the units only as described in the instructions.*

WARNING: *Return the entire appliance (including all parts and accessories) to an authorised service centre for examination and repair.*

Storage

Always clean the appliance before storing (see 'Care and Cleaning'). Ensure to store the appliance where it is clean, dry and safe from frost, direct sunlight and inadmissible strain (mechanical or electric shock, heat, moisture) and where it is out of reach of young children. Place the appliance on a clean and stable surface, where it can not fall. Do not place any hard or heavy objects on the appliance. To avoid touching the blade unintentionally or to loose any accessories, it is good advice to store the blender completely and properly assembled.

Trouble shooting

The Design Classic Digital Mixer is reliable and robust and handling it with care it will operate properly. For the case that problems show up you can solve the problems on your own using the trouble shooting guide. ***WARNING:*** *Only use the appliance for the intended use. For attendance and repair take the appliance to an authorised service centre.*

Problem	Solution
The motor stucks or slows down	Use a higher speed for processing. If necessary (because the container is overloaded) pour out part of the content of the container. Chop hard ingredients such as nuts or chocolate before putting them into the container.
The motor stops or you can not turn the motor on again	Turn the appliance 'OFF', if the motor stops all of a sudden or stalls during operation to avoid overheating. Go through following checking list:
	The unit automatically shuts off after operating for 2 minutes. If you want to operate again, unplug the appliance, wait 1 minute and plug in again.
	Take the container off the motorblock and clear out firmly bounded food that blocks the blade using a spoon. Do not use force to avoid damaging the blade.
	Chop hard ingredients such as nuts or chocolate before putting them into the container. If necessary (because the container is overloaded) pour out part of the content of

	the container and try to restart the motor using a higher speed. ATTENTION: Do not try to mix ingredients of very hard consistency or ingredients which are too big in size to avoid overloading the motor. Do not overfill the container. Process very hard food in more then one go. The mixer is not intended for chopping nuts with shell, bones or simular hard ingredients.
The bottom of the container untightens during operation; liquid leaks.	Turn the appliance 'OFF' and pull the plug out of the power outlet. Empty the container. Clean and dry the motorblock. If any ingress of moisture into the motorblock or through the louvre take the appliance for technical maintenance and repair to an authorised specialised reparation shop. **TIP:** Before filling liquid into the container check if the container is leak-proof by filling it with water. If the container is leaking take the appliance for technical maintenance and repair to an authorised specialised reparation shop.
It is not possible to get the container leak-proof; Liquid leaks from the bottom	Empty the container. Check if there are crusts or damages on the single units. Clean the units if necessary. Take the appliance for technical maintenance and repair to an authorised specialised reparation shop.of the container. Replace damaged units by original spare parts of the manufacturer. **ATTENTION: Never** use the appliance with improper or damaged units. Only use spare units provided and made by the manufacturer. Contact you vendor for help.

NOTE: *The holder is glued tight to the glass container and can not be disassembled.*

Waste disposal

The appliance has to be deposed by the definition of the regional waste disposal of electricalscrap.

If necessary get information of the regional waste management enterprise.

Warranty

We guarantee that all our products are free of defects at the time of purchase.

Any demonstrable manufacturing or material defects will be to the exclusion of any further claim and within 2 years after purchasing the appliance free of charge repaired or substituted.

There is no Warranty claim of the purchaser if the damage or defect of the appliance is caused by inappropriate treatment, over loading or installation mistakes.

The Warranty claim expires if there is any technical interference of a third party without an written agreement. The purchaser has to present the sales slip in assertion-of-claims and has to bear all charges of costs and risk of the transport.

GASTROBACK GmbH
Gewerbestraße 20 • D-21279 Hollenstedt/Germany
http://www.gastroback.de • E-Mail: info@gastroback.de